


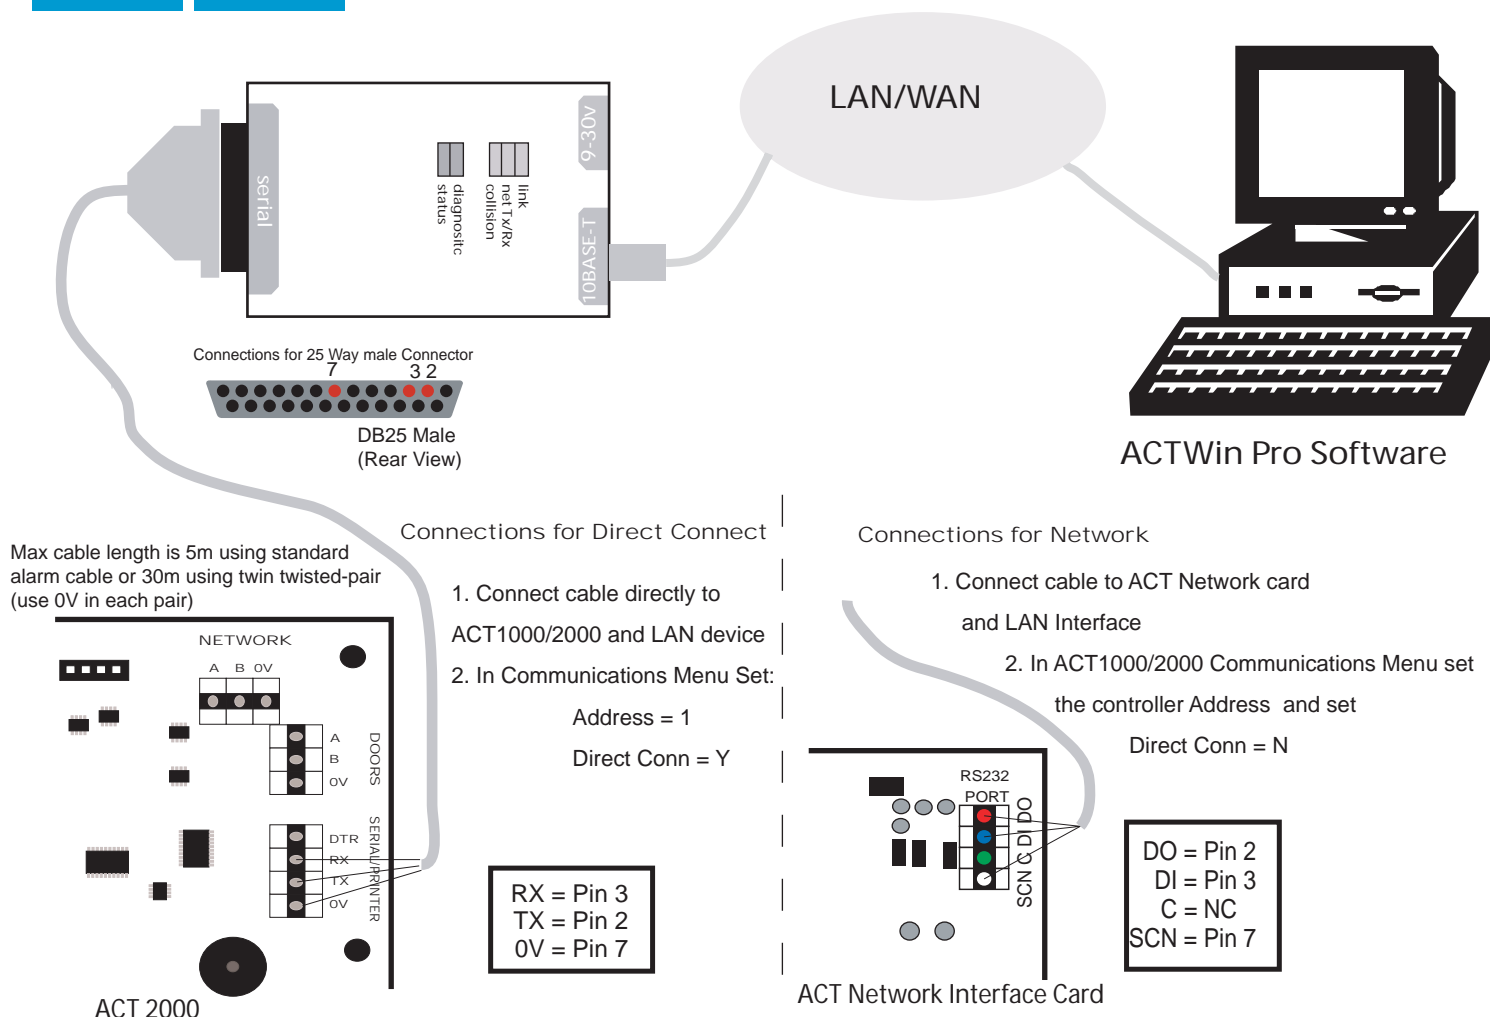

ACTLAN Interface Configuration



TCP/IP Configuration

1. Ask the network administrator to supply you with a permanent IP network address.
2. Connect a PC directly to the ACTLAN and run HyperTerminal at 9600 baud, no parity, 1 stop.
3. Power up the ACTLAN and **immediately** hit 3 lowercase "x" (xxx).
4. Hit the Enter key to go into Setup Mode.
5. Select 0 and follow the prompts until you get to IP address.
6. Enter the new IP address.
7. Follow the prompts to come back to the Setup Menu.
8. Select 1 to configure the RS232 channel.
9. Set up the following parameters as follows:

Baud Rate	9600	I/F Mode	4C
Flow	00	Port	10001
Connect Mode	C0	Disconnect Mode	00
Flush Mode	80	Pack Control	00
Remote IP Address	none		
10. Return to the Setup Menu and select 9 to save the settings.
11. Finally test the setup by connecting to the IP address using a Web browser.
12. From ACTWin Pro, enter the new IP address into the location manager for the site. 18-00026

