


ZTX6/RMA3 Installation Instructions

The ZTX6/RMA3 is for expanding the ZTX6/8M2, ZTX6/16M4 or ZTX6/24M6 to fit a 19" rack. The ZTX6 and the ZTX6/RMA3 are 3U high.

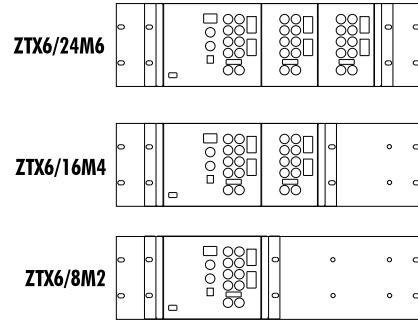

To Install your ZTX6/RMA3:

- Arrange your ZTX6/RMA3 panel so that the counter sunk side of the 8 holes are away from you
- Place your ZTX6 on the panel so that 4 screw holes are visible through the rack mount holes in both end-caps
- Place the 4 screws provided through the holes so that their heads slot into the countersink
- Fit the 8 washers provided over the screws (plain washer followed by spring washer on each screw)
- Fit the nuts and tighten using an appropriate spanner

Then install your ZTX6 as normal using the ZTX6 Installation Instructions.


Baxall Security Limited.

Stockport, England

Baxall Security Ltd. reserve the right to make changes to the product and specification of the product without prior notice to the customer.

ZTX6/RMA3 Installation Instructions

The ZTX6/RMA3 is for expanding the ZTX6/8M2, ZTX6/16M4 or ZTX6/24M6 to fit a 19" rack. The ZTX6 and the ZTX6/RMA3 are 3U high.

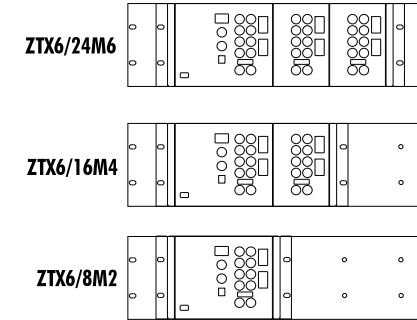

To Install your ZTX6/RMA3:

- Arrange your ZTX6/RMA3 panel so that the counter sunk side of the 8 holes are away from you
- Place your ZTX6 on the panel so that 4 screw holes are visible through the rack mount holes in both end-caps
- Place the 4 screws provided through the holes so that their heads slot into the countersink
- Fit the 8 washers provided over the screws (plain washer followed by spring washer on each screw)
- Fit the nuts and tighten using an appropriate spanner

Then install your ZTX6 as normal using the ZTX6 Installation Instructions.

Baxall Security Limited.

Stockport, England

Baxall Security Ltd. reserve the right to make changes to the product and specification of the product without prior notice to the customer.