



VR8 Desktop Alarm System



- ▶ Eight zones
- ▶ 16 supervised wireless sensors
- ▶ Built-in RF receiver, LCD keypad, analog dialer, and acoustic sounder
- ▶ 16 user codes including eight keyfob users
- ▶ Background memory for 40 events
- ▶ Remote programming

The VR8 Intruder Alarm System includes a control panel and assorted detectors such as magnetic, motion, and smoke. Operate the system using the keypad or keyfob.

Functions

Built-in Receiver

The system has a built-in receiver that connects up to 16 radio frequency (RF) devices such as PIR, door contacts, and smoke detectors.

Built-in Acoustic Sounder

Internal piezo siren provides at least 90 dBA/100 cm sound pressure level (SPL) to sound an alarm.

Built-in Tamper Switch

The built-in tamper notifies the control panel when someone removes the enclosure cover or lifts the unit from the desktop.

Arming and Disarming

Users can arm the VR8 using the keypad, a keyfob, or the telephone. Users can disarm the VR8 using the keypad or a keyfob. Programmable exit and entry time delay values determine the amount of time a user has to arm or disarm before the alarm sounds.

Programming

Program the VR8 System using the integrated keypad, a laptop, a plug-in programming key for standard programs, or compatible programming software.

Zone Types

Users can configure three zone types for the system.

Zone Type	Description
Burglary	Sounds an alarm when a fault is detected and the VR8 is armed.
24-Hour	Sounds an alarm when a fault is detected, such as a tamper switch. The VR8 can be armed or disarmed.
Fire	Sounds an alarm when a fault is detected by a smoke detector. The VR8 can be armed or disarmed.

Certifications and Approvals

CE
A-Tick

Installation/Configuration Notes

Compatibility Information

Keyfobs	RF3332E and RF3334E
Smoke Detectors	RF280ETHS
PIR Detectors	RF940E
TriTech Detectors	RF835E
RF Point Transmitters (Reed Switch)	RF3401E
Programming Software	CC816 Alarm Link Software (A-Link)

Wiring Considerations

Base includes cable routing channels for AC power and telephone cord.

Power Considerations

Requires locally approved, limited power Class I AC adaptor with 18 VAC, 1.3 A output and protective earth connection.

Parts Included

Each standard system includes:

Quantity	Component
1	VR8 including built-in keypad, LCD display, and siren

Technical Specifications

Data Bus	Internal ports for auxiliary and programming modules
Enclosure Design	
Color:	White
Indicators:	Eight zone LCD display
Material:	ABS
Dimensions:	20.8 cm x 25.5 cm x 8.4 cm (8 in. x 10 in. x 3 in.)
Weight without Battery and AC Adaptor:	1 kg (2 lb)
Environmental Considerations	
Relative Humidity:	10% to 95% non-condensing
Temperature (Operating):	0°C to 45°C (32°F to 113°F)
Keypads	
Number Supported:	One built-in keypad
Outputs	
Alarm Relay:	One Form C contact rated at 1 A, 30 VDC
Solid-State:	Three open collector
Power Requirements	
Current Draw:	65 mA from battery when idle and with AC fail
Primary Voltage Input:	Varies according to local adaptor
Secondary Voltage Input:	18 VAC, 1.3 A
Telephone Interface	Terminal block and 6p4c FCC68 Modules
Zone Characteristics	
EOL Resistors:	Programmable for wired zones (if used)

Ordering Information

VR8 Desktop Alarm System	VR8488EU
Includes a control panel and assorted detectors. Operate the system using the keypad or keyfob.	

Europe, Middle East, Africa:
Bosch Security Systems B.V.
P.O. Box 80002
5600 JB Eindhoven, The Netherlands
Phone: +31 40 2577 284
Fax: +31 40 2577 330
emea.securitysystems@bosch.com
www.boschsecurity.com

Americas:
Bosch Security Systems, Inc.
130 Perinton Parkway
Fairport, New York, 14450, USA
Phone: +1 800 289 0096
Fax: +1 585 223 9180
security.sales@us.bosch.com
www.boschsecurity.us

Asia-Pacific:
Bosch Security Systems Pte Ltd
38C Jalan Pemimpin
Singapore 577180
Phone: +65 6319 3450
Fax: +65 6319 3499
apr.securitysystems@bosch.com
www.boschsecurity.com

Represented by