

EIP601 and EIP602 NVR Server



The Ernitec EIP601 and EIP602 EasyView™ NVR servers support continuous, schedule, alarm and motion recording with pre-event and post-event time period programmable on per-channel basis.

The systems record video in a MPEG-4 format supporting all Ernitec IP cameras and the Ernitec video server, EIP510.

The EasyView™ NVR servers are installed on a powerful PC server unit with a server operating system suitable for meeting the requirements for IP video recording.

The servers are equipped with up to 4TB HDDs allowing storage of video from several weeks depending on the camera settings (frame rate, resolution and recording mode).



EIP601 and EIP602 NVR server



Main Features

- Manages up to 64 cameras with tree-directory display
- Supports 1, 4, 6, 8, 9, 10, 16, 25, 36 window layout
- Supports megapixel MPEG-4 format
- Customizable logo and user interface
- Multiple-channel preview in full-screen mode
- Supports different frame rate on live view and recording
- Zoom function on live view and playback
- Schedule, Motion, Alarm Recording
- Supports motion detection and digital I/O event from hardware
- Maximum 30 seconds pre-event recording
- Expandible PTZ commands
- Search video clips by date, time and event
- Time-based search bar
- 4-channel synchronized playback
- eMap Manager
- NVR web client and NVR workstation

Specifications and ordering numbers

System Requirements

PC specification	16 Channel: EIP601-16, 2TB raw storage 32 Channel: EIP602-32, 4TB raw storage
Operating system	Windows 2003 R2
Browser	Microsoft Internet Explorer v6.0, v7.0
Web server	Microsoft IIS Server. Required for NVR web client*

Preview

Maximum number of camera	64
Window layout	1, 4, 6, 8, 9, 10, 16, 25, 36
Tree display panel	User may drag-n-drop to drag a video source to the layout manager for live view
Web client	Remote live view via Internet Explorer
Patrol mode	Switches and displays each preview window accordingly. Pre-defined layout can be set to patrol mode as well
2-Way Audio	Supports 2-way audio. User may have 1-to-1 or 1-to-many audio broadcast to multiple devices at the same time
Create snapshots	Creates snapshot images on-the-fly and as an event index for search later on
Advanced preview mode	Maximum 36-channel preview at the same time with different frame rate adjusted automatically
Layout manager	Setup pre-defined window layout to group certain cameras in the same layout. Layout manager can be displayed in full-screen mode
Digital zoom	User may zoom in/out the video display

Recording

Schedule recording	Records video with user-defined schedule and time period
Alarm recording	Records video when a digital input event is triggered
Motion recording	Records video when motion detected
Pre-event recording	User-defined time period to record before a certain event occurs. Maximum 30 seconds
Post-event recording	User-defined time period to record after a certain event occurs. Default 5 minutes
Watermark*	Digital date and time code embedded into the video stream

Storage Manager

Number of drives	Supports up to 23 drives in one machine
Keep certain days	The video clips will be kept for certain days according to user-defined value
Recycle recording	The oldest video clip will be overwritten when the disk reaches its minimum space requirement
Total space management	When total space reaches its minimum space requirement, certain space will be clean up. The oldest files will be removed first

Playback

Playback mode	Play, pause, stop, fast forward, fast rewind, play backward, play frame by frame, 1/2/4/8x speed control
Play multiple files *	Plays multiple files in sequence for a period of time
Create snapshots	Creates snapshot images on-the-fly and can be searched as an event
Export video	Exports a period of video clips into one AVI file
Synchronized playback	4-channel synchronized playback at the same time
Digital zoom	User may zoom in/out the video display

Search

Time sequence search	Search video clips with date, time, channel
Event search	Search motion detection, digital input, bookmark, snapshot event with specified date, time, channel
Thumbnail image search *	Search video clips with thumbnail image previews
Status event search	Search events on video loss/recovery, network disconnect/reconnect, user login/logout, database log with specified date, time, and channel
Time-based search bar	The recording and events are displayed with a time-bar, user may click on the bar to start playing the recorded archive
Snapshot viewer	Display snapshots in thumbnail view; user may browse the snapshots then click it to start playback video clip at that time stamp

PTZ Control

PTZ management	Manages pan, tilt, zoom operation with speed control
Protocol supported	Pelco-P, Pelco-D, Lilin, Dynacolor, Samsung, Kampro, Sony VISCA, Panasonic protocol supported
Preset position	Goto, set, clear preset positions and patrol on preset positions
Preset position number	32
PTZ tour	Patrol preset positions with user-defined dwell time

PTZ pattern	Executes speed dome pattern command
Expandable PTZ command	User-defined PTZ command to support additional PTZ protocols
Mouse PTZ	On-screen 8-direction PTZ operation with mouse operation. This can be run under full-screen mode as well
USB joystick on PC	Connects joystick on the PC via USB port to control speed dome directly
Control panel on PC	Connects control panel on the PC via COM port to control speed dome directly

Event Handling

Event types	Handles motion detection, alarm, video loss, network disconnection events
Event acknowledgement	Event will need to be acknowledged by security operator
Trigger digital output	Triggers digital output when certain events (digital I/O or motion detection) occur
Hot-Spot window	Activates and switches the channel with event to the hot-spot window. The original video in the hot-spot window will then be switched over
Pop-up window	Mini-preview window will be pop-up when event occurs. Pop-up window will be dismissed when user-defined dwell time elapsed or security operator clicks on the "Dismiss" button
Event log	Triggered event will be recorded into a event log
E-Mail notification	E-Mail notification with captured snapshot
FTP notification	FTP captured snapshot to the FTP server
Play audio file	Plays user-defined audio file or beep on the machine
Go to PTZ preset	When event occurs, it requests the speed dome to go to certain PTZ preset position
Execute command	User-defined execution command will be executed
Scheduled event*	User may setup a schedule to execute certain operation. For example, generate a snapshot in JPEG and FTP to a site

eMap

eMap manager	eMap configuration and management
eMap monitor	Creates alarm when an event occurs on a certain camera in eMap
Preview-All mode	With this mode, all cameras in the associated map will be displayed with QCIF @ 1FPS preview. When double-click on the preview window, the original video window will be brought up with its original resolution and frame rate
eMap tour	Maps can be patrolled and displayed one by one with user-defined dwell time

NVR Web Client Function

Remote preview	Live view via web browser
Remote playback	Search and playback via web browser
Remote search	Search certain events via web browser
Remote map	Manages map via web browser

Permission Control

Multi-level permission	Administrator, standard user, guest levels. User may add new user group for advanced permission control
Security	Account/password defined with associated permission control
Camera group permission	User may setup the permission between user account and the camera group
eMap permission	User may setup the permission between user account and eMap layer

* The features will be implemented in later released bundled application



Denmark Head Office

Ernitec A/S
Phone: +45 44 50 33 00
Fax: +45 44 50 33 33
mail: info@ernitec.dk

French Branch Office

Ernitec France
Phone:+33 (0)467 151 015
Fax:+33 (0)467 640 181
mail: info@ernitec.fr

German Branch Office

Ernitec GmbH
Phone:+49(0)(40)6756250
Fax:+49(0)(40)67562525
mail: info@ernitec.de

UK Branch Office

Ernitec UK
Phone:+44 (0)1903263125
Fax:+44 (0)1903263126
mail: info@ernitec.co.uk

Middle East Office

Ernitec ME
Phone: +961 1 751 796
Fax: +961 1 751 795
mail: info@ernitecme.com